

Removing the Coin Mech from a Pringles Machine



1. Find the correct key to the metal cash door



2. Rotate the key until the cash lock has been removed



3. Remove the silver locking bar



4. Remove cash draw from machine



5. You should now have removed the above items




6. Reach in to the machine with right palm facing centre.



7. Using your index finger push up the locking black bar



8. The front panel should now be free to remove

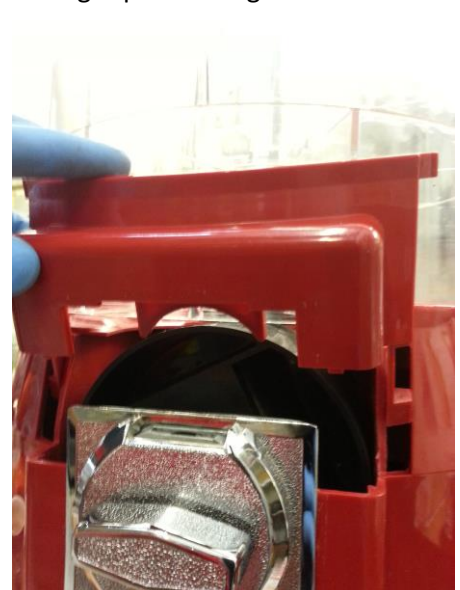

9. You will now be able to remove the mech for the machine